

Seiko Series SEQ (8M35)

Yacht Timer

FEATURES

- ◆ Hour and minute hands.
- ◆ Preset countdown timer: 5-, 10- and 15- min. timers.
- ◆ Adjustable countdown timer: Up to 30 minutes can be set in minutes.
- ◆ Use the "Match 0" mode to put both hands in the 12 o'clock position.

HOW TO SET TIME

1. Turn crown at normal position to set mode indicator "TIME", then pull crown out to first click.
2. Press button "A" repeatedly to set minute hand.**
3. Press button "B" repeatedly to set hour hand.**
4. Push crown back into normal position.

HOW TO OPERATE THE COUNTDOWN TIMER

1. Preset Countdown Timer
 - To set the timer, turn crown to set mode indicator to "5", "10" or "15".
 - For timer operation push button "A" for Start/Stop/Restart.
 - Push button "B" to reset.
 - Warning beep: Beeps for 5 seconds when the time is up.
 - To stop it, press button "A" or "B".
 - Warning sound beeps differently to signal the remaining time.
2. Adjustable Countdown Timer
 - To set the timer, turn crown to set mode indicator to "Timer", then pull crown out to first click.
 - Press button "A" or "B" repeatedly to set minute hand for the desired minutes.**
 - To set 30 minutes, set the hand at 9 o'clock position.
 - Push crown back into normal position.
 - For timer operation set crown at normal position.
 - Push button "A" for Start/Stop/Restart.
 - Push button "B" to reset.
 - Warning beep: Beeps for 5 seconds when the time is up.
 - To stop it, press button "A" or "B".

HOW TO ADJUST FOR HAND POSITION

1. Turn crown at normal position to set mode indicator to "Match 0", then pull out to first click.
2. Press button "A" repeatedly to reset minute hand to the 12 o'clock position.**
3. Press button "B" repeatedly to reset hour hand to the 12 o'clock position.

OPERATION AFTER THE BATTERY CHANGE

1. Turn crown at normal position to set mode indicator to "Match 0", then pull out to first click.
2. Press buttons "A" & "B" continuously at the same time for 3 seconds. A beep sounds when the buttons are released, and the hands start to move automatically.
3. Press button "A" or "B" to stop the hands.
3. Press button "A" to reset minute hand to the 12 o'clock position.**
4. Push crown back into normal position.

** Hand moves quickly if the button is kept pressed.

