


Orange regatta hands

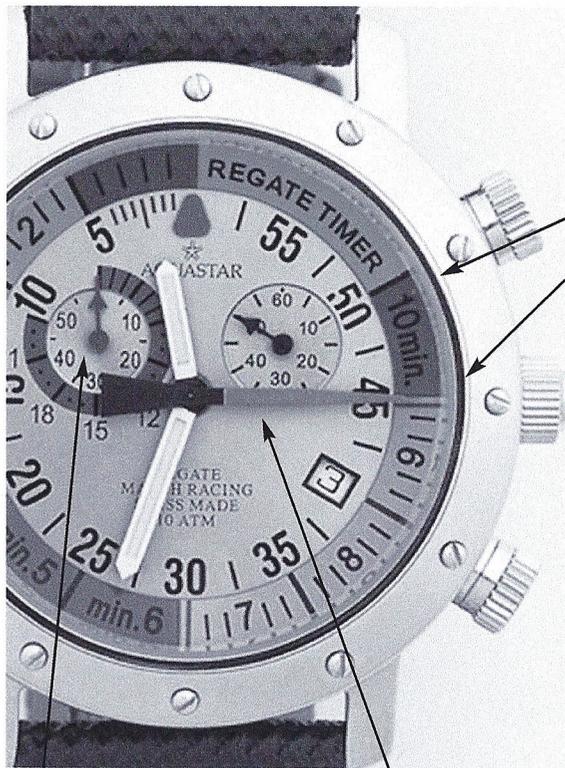

small regatta
hand

big regatta
hand

> until last minute before departure :

- >> the small regatta hand displays the seconds
- >> the big regatta hand is moving of one minute on 30 degrees

30 degrés

> during the last minute :

- >> the big regatta hand is moving on 360 degrees - it makes a complete turn of the dial in 60 sec. to insure a optimised readiness of the last min.
- >> the small regatta hand stops

> as soon as the countdown is at the end and that the boat has crossed the departure line :

- >> the big regatta hand totalises the minutes
- >> the small regatta hand totalises the hours

Hour setting and calendar correction



small seconds hands

- > indicates the seconds permanently
- > low battery : the small second hand will jump from 4 to 4 sec. before the battery will be empty

> quick correction of calendar

- > pull the crown to 1st position then turn the crown
- > between 22h and 02h, the calendar cannot be set in quick mode

> time setting : pull the crown to position 2 and adjust time

- > normal correction of calendar : pull crown to position 2 and have the hands moving over 24 hours

The screwed pushers are a guarantee against any involuntary manipulation of the pushers



to close the pusher

to activate the pusher it has to be unscrewed

> do not block them hardly in screwed or unscrewed position

> it is not necessary to screw or unscrew the pushers completely

to open the pusher

Start & Stop the chronograph / countdown



1 > setting

> press the pusher **A**

2 > stop at the end of the Regatta

>> press pusher **A**

>> press pusher **B**

>> press a second time pusher **B**

stop during countdown,

(before departure line) :

>> press pusher **A**

>> press pusher **B**

(normally, you will not use this function)

choice of the departure minute of the countdown
(10, 9, 8, 7, 6, 5, 4, 3, ou 2 min. before departure)



1

> push in the pusher (long pressure) **while 2 sec.**
(=1 bip)
> **release** the pusher

2 sec.

2

>immediately after, press briefly on the pusher (= hand is moving 1 min. forward)
>each new brief pressure on the pusher will forward the hand of 1 min.- 3 sec. after the last pressure your setting is registered

1/2 sec.

Advanced adjustment function : modification of the minute departure during the countdown



exemple :

During the last race, the departure was given at -9 min. Today departure will be given at -6 min. Unfortunately you forgot to set your regatta hand at -6 min. and you have clenched the countdown at -9 min. at starting time.

It is not dramatic ! You have the possibility to adjust it.

1> you have pressed the pusher A when starting shoots announces the departure

2> !!!! just after the starting shoot you discover that he countdown is set for -9 min. instead of -6 min.

3 >>> press one time on B = the regatta hand goes to -8 min.

>>> press a second time on B = the regatta hand goes to -7 min.

>>> press a third time on B = the regatta hand goes to -6 min.

to reset the orange hands

when the big hand, in resting position, stops between two hours :

- > after a change of battery,
- > after a wrong handling,
- > after a strong chock,



- 1) pull the crown in position 1
- 2) press on B pusher :
>> the big orange hand is moving forward and stops,
- 3) press continuously on B pusher until the big hand arrives on 11h. then press step by step until it arrives at 12h. sharp ,
- 4) press (if nessecary) on the pusher A step by step until the small orange hand arrives at the beginning of the blue zone,
- 5) press the crown in position 0